

Android APPLICATION

RS-MS1A

This application is designed for Android devices. With the RS-MS1A, you can use the extended D-STAR functions to exchange images or messages, or display received D-PRS station data on a map application.

System requirements

The following system is required to use the RS-MS1A.

- Android version 8.0 or later
The RS-MS1A has been tested with the Android 8.x, 9, 10, 11, 12, 13, 14, 15, and 16.
- USB host function on the Android device
or
Bluetooth function on the Android device
- ① Depending on the application status or the capacity of your device, some functions may not work correctly.
- ① This instruction manual is based on RS-MS1A version 1.4.3 and Android 16.
Display indications may differ depending on the Android version or connecting transceiver.
- ① Some devices running Android 16 or later support landscape mode.

Icom and the Icom logo are registered trademarks of Icom Incorporated (Japan) in Japan, the United States, the United Kingdom, Germany, France, Spain, Russia, Australia, New Zealand, and/or other countries.

The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Icom Inc. is under license.

Google, the Google Logo, and Android are registered trademarks or trademarks of Google LLC.

All other products or brands are registered trademarks or trademarks of their respective holders.

About the licenses

This product includes "Android-Image-Cropper" open source software, and is licensed according to the open source software license.

This product includes "usb-serial-for-android" open source software, and is licensed according to the open source software license.

Refer to the "About the licenses" page at the end of this manual for information on the open source software being used in this product.

Compatible transceivers

The following list shows the transceivers that are compatible with the RS-MS1A, and their compatible functions.

	ID-31A/E PLUS	ID-4100A ID-4100E	ID-50A ID-50E	ID-51A/E (PLUS2, PLUS, 50th Anniversary model)	ID-52A ID-52E	ID-52A PLUS ID-52E PLUS (Including 60th Anniversary model)	ID-5100A ID-5100E	ID-5200A ID-5200E	IC-705	IC-9700	ID-51A/E ID-31A/E IC-7100
DV Fast Data	✓	✓	✓	✓	✓	✓	✓*1	✓	✓	✓*2	N/A
DR function*3	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	N/A
Share Pictures	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Text Messaging	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Map*3	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	N/A
Offline Map*3	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	N/A
RX History*3	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	N/A
Your Call sign	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Repeater list	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Transceiver Setting*3	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	N/A
Application Setting	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Import	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Export	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
USB Connection	✓	N/A	✓	✓	✓	✓	N/A	✓	✓	✓	✓
Data cable for USB connection	OPC-2350LU*4 DATA CABLE	N/A	User supplied	OPC-2350LU*4 DATA CABLE	OPC-2417 (Micro-B to Micro-B) DATA CABLE or OPC-2418 (Micro-B to Type-C) DATA CABLE	User supplied	N/A	User supplied	OPC-2417 (Micro-B to Micro-B) DATA CABLE or OPC-2418 (Micro-B to Type-C) DATA CABLE	OPC-2350LU*4 DATA CABLE	OPC-2350LU*4 DATA CABLE
Bluetooth Connection	N/A	Requires UT-137 Bluetooth UNIT	N/A	N/A	✓	✓	Requires UT-133 Bluetooth UNIT	✓	✓	N/A	N/A

N/A: Not Applicable

*1 Usable only with the transceiver firmware versions CPU M 1.10, S 1.00, C 1.10, and DSP 1.10 or later installed.

*2 Usable only with the transceiver firmware version Main CPU 1.03 or later installed.

*3 You cannot use these functions when you select "Others (Bluetooth)" or "Others (Bluetooth)" on the "Select Transceiver Model" screen.

*4 When connecting the OPC-2350LU to an Android device with a USB Type-C port, A USB On-The-Go (OTG) adapter to convert to USB Type-C is required (user supplied).

① The compatible transceivers differ, depending on the application version.

Menu item description

This section describes the Menu items.

① [DR]

Sets the DR function's [FROM] and [TO] settings.

② [Share Pictures]

- Transmits an image using the data communication function.
- Displays the received or transmitted images.

① When using a transceiver that can make DV Fast Data communication (p. 2), you can transmit the image using DV Fast Data*.

③ [Text Messaging]

- Transmits message using the data communication function.
- Displays the received or transmitted message.

① When using a transceiver that can make DV Fast Data communication (p. 2), you can transmit a message using DV Fast Data*.

* The DV Fast Data function uses the data and the audio frames to send data approximately 3.5 times faster than the normal speed. While holding down [PTT], audio can also be sent with an image or message, but only at the normal speed.

④ [Map]

- Displays the location of the caller or repeater on a map.
- Sets the [FROM] or [TO] settings from the data displayed on the map.

⑤ [Offline Map]

Displays the location of the caller or your station on a map, even if your Android device is offline using your own maps.

⑥ [RX History]

- Displays the received DV call information.
- Accesses the transceiver's information site.

⑦ [Your Call sign]

Adds or edits Your (UR) call signs used in the DV mode.

⑧ [Repeater list]

Displays the Repeater List contents.

NOTE: The Repeater List is not synchronized with the transceiver's list. Before using this program, import the same list as your transceiver.



⑨ [Transceiver Setting]

Sets certain transceiver's settings.

The RS-MS1A does not enable you to set all transceiver's settings.

⑩ [Application Setting]

Sets the RS-MS1A settings, such as the display unit of measure.

⑪ [Import]

Imports the Repeater List and Your Call Sign Memory.

⑫ [Export]

Exports the Repeater List, Your Call Sign Memory, and RX History.

⑬ Displays either the Bluetooth or USB connection, depending on the connection status.

[Bluetooth Connection]

Connects to the transceiver using Bluetooth.

[USB Connection]

Connects to the transceiver using a USB cable.


⑭ [Exit Application]

Exits the RS-MS1A program.

DR

You can set the [FROM] and [TO] settings for the DR function.

Call signs and other various parameters can be set in this screen.

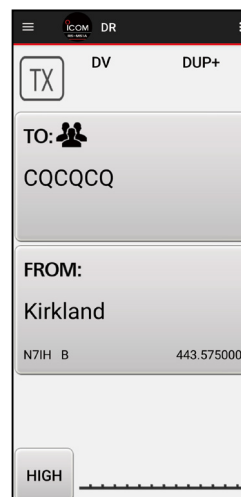

Share Pictures

[Send]

You can transmit an image that you took or saved, through the transceiver.


- Touch the black area for 1 second to open the “Select the picture” window to select the option where the picture you want to send is stored.

*1 Tap [Receiver], and then select a receiver's call sign to let all stations that receive the image know the image's intended destination. All stations that receive the signal can see the image, even if they are not set as the receiver.

*2 You can transmit the message entered on this field.

*3 To send position data, tap [Position], and then select a desired option to enter the position.

[Send]

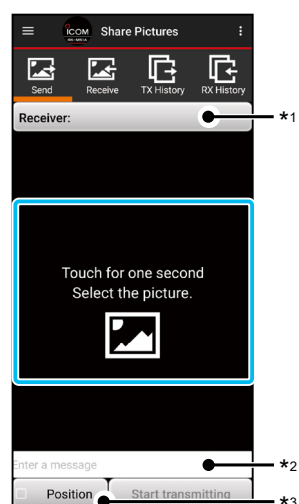


[Receive]

You can view the received image.

- Tap [Save] to save the received image on the Android device.
- ① The image is automatically saved in the “Pictures” folder in the Android device. (Pictures > **RS-MS1A**)

[Receive]

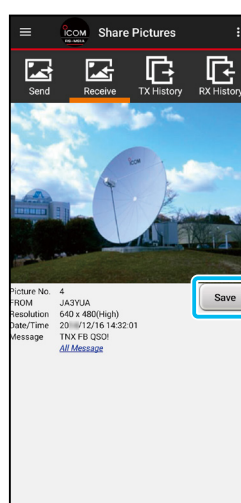


[TX History]

View the transmitted image list.

Up to 500 files can be stored.

When you transmit the 501st image, the oldest file will automatically be deleted.

- Tap a file to retransmit from TX History.
- Touch a file for 1 second to delete it from TX History.

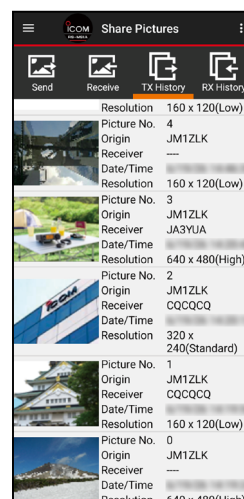
[TX History]**[RX History]**

View the received image list.

Up to 500 files can be stored.

When you receive the 501st image, the oldest file will automatically be deleted.

- Tap a record to save.
- Touch a record for 1 second to delete it from RX History.

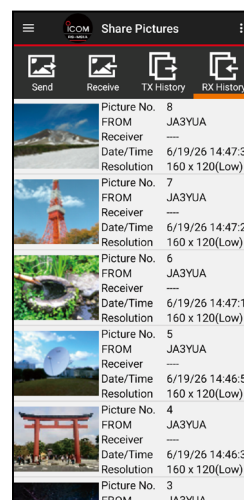[RX History]

Text Messaging


You can transmit the entered message from the transceiver.

After transmitting, the sent message is displayed on the right side of the display.

If you set "Receiver," the name of the receiver is displayed instead of "----."

After reception, the received message is displayed on the left side of the display.

- ① "(Picture attached)" is displayed under the call sign when an image is transmitted with the message.

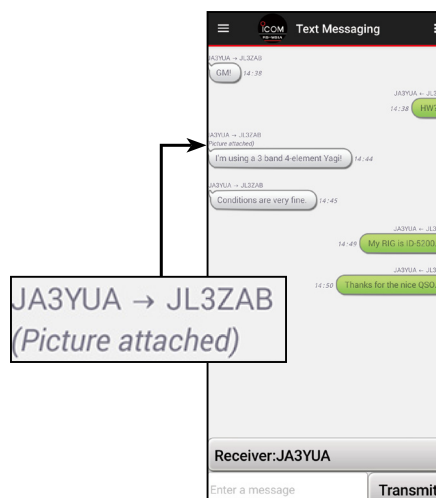


Map

The map screen displays the location of the DV repeater, FM repeater or the caller with an icon, if the repeater or the caller's signal contains position data.

- Tap the icon to display the information window.
- Tap the information window to set [FROM] or [TO] for the DR function.

NOTE: When you import the repeater list, update the repeaters on the map:

1. Tap  in the upper right corner of the screen, and then tap "DV Repeater station OFF" or "FM Repeater station OFF."
2. After loading, tap  again, and then tap "DV Repeater station ON" or "FM Repeater station ON."

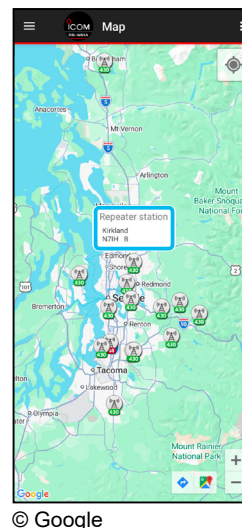

Offline Map

The Offline map screen displays the location of the caller or you, even if your Android device is offline using your own maps.

- ① Before using, prepare a map picture.
- ① You can find information about the offline map settings on the Icom website.
<https://www.icomjapan.com/lineup/options/RS-MS1A/>
- ① Depending on the application you use to select a map for import, an import error may occur. If you cannot import a map, try using other applications to select.



RX History

View the Received History list.


Up to 10000 records can be stored.

When you receive the 10001st DV call, the oldest record will be automatically deleted.

- Tap a record to display the detailed information.

NOTE:

- If "RX History Log" is set to "ON" on the Application Settings screen, automatically saves the RX History Log in the DV mode. The RX record file is saved in the "RXHistoryLog" folder in the Android device, in the "csv" format. (Documents > RS-MS1A > **RXHistoryLog**)
- You can search or delete an RX history entry by tapping the Menu button on your Android device.

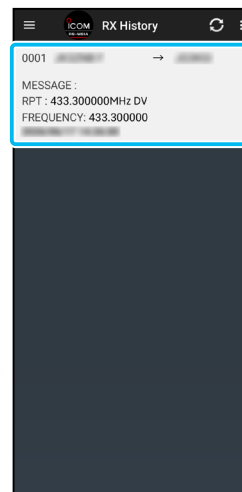


Your Call sign

View the Your (UR) call sign list.

You can enter up to 500 Your (UR) call signs.

- Tap “+” to display the “Add to the Call sign List” window.

NOTE: When you add the 501st call sign, a warning message is displayed. In that case, delete an already-entered call sign, and then try again.

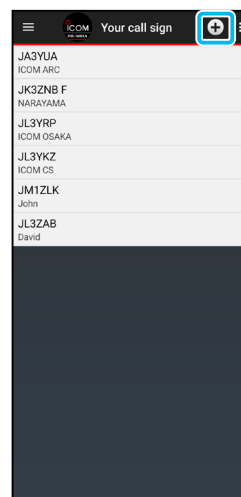


Import

You can import the Repeater List or Your Call Sign Memory in the “csv” format.

NOTE:

- You can download the latest repeater list from the Icom website by tapping “Repeater List,” and then “Download from Internet.”
<https://www.icomjapan.com/lineup/options/RS-MS1A/>
- You can import the Your Call Sign Memory from the transceiver’s SD card.
- You cannot import the DD repeater information and the DD simplex information.

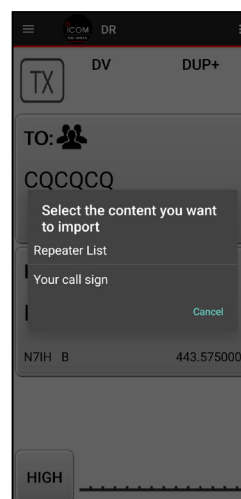


Export

You can export the Repeater List, Your Call Sign Memory or RX History.

The exported data is saved in the selected folder, in the “csv” format.

The files names are automatically created in the format show below.


- Your Call Sign: YourCallSignList_“date”_“time”.csv
- Repeater list: RepeaterList_“date”_“time”.csv
- RX History: RXHistoryList_“date”_“time”.csv

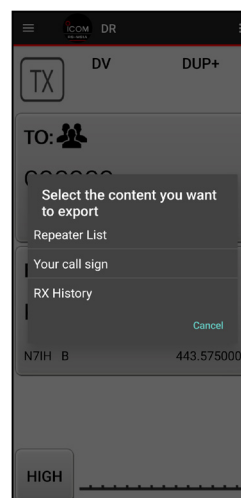

Operating notes

Common notes:


- If the Menu item does not fit into your Android device screen, change the font or font size.
- Only one application using the same communication interface can be connected to a single transceiver at a time.
- If the application requires some permissions, you need to grant permissions to use some functions. For operations of the Android device, read the Android device's instruction manual.
- When starting the RS-MS1A program, select a transceiver to connect to.

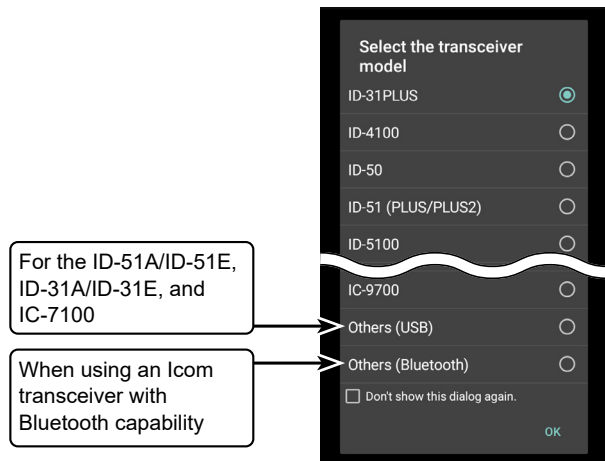

- ① The selectable transceivers may differ, depending on the RS-MS1A version. If your transceiver is not displayed, select “Others (USB)” or “Others (Bluetooth),” according to the connection between your transceiver and Android device. When you select “Others (USB)” or “Others (Bluetooth),” you cannot use some functions. (p. 2)

For the USB connection:

- Disconnect the OPC-2350LU or a USB cable when it is not in use. Connecting a cable increases the power consumption of your Android device.
- The RS-MS1A program may lock up when transmitting some high-quality or large size images, or continuously operated for a long time. In this case, restart the program.
- Depending on the Android device, the power supply to the USB terminal may be disabled while in the display sleep mode or power-saving mode. If you have such a device, check the “Screen timeout” check box on the Application Setting screen of the RS-MS1A.
- If the RS-MS1A does not detect the transceiver connected with a cable, enable the USB device detection or the OTG function on your Android device.
- When you transmit an image with the baud rate set at 4800 bps, some of that data may be lost. In this case, set the baud rate to over 9600 bps in “Baud rate” on the Application Setting screen of the RS-MS1A to match the transceiver's setting.

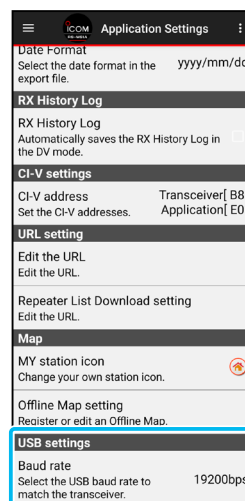

About the licenses

Android-Image-Cropper

Copyright 2016, Arthur Teplitzki, 2013, Edmodo, Inc.

Apache License
Version 2.0, January 2004
<http://www.apache.org/licenses/>
TERMS AND CONDITIONS FOR USE, REPRODUCTION, AND DISTRIBUTION

1. Definitions.

"License" shall mean the terms and conditions for use, reproduction, and distribution as defined by Sections 1 through 9 of this document.

"Licensor" shall mean the copyright owner or entity authorized by the copyright owner that is granting the License.

"Legal Entity" shall mean the union of the acting entity and all other entities that control, are controlled by, or are under common control with that entity. For the purposes of this definition, "control" means (i) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (ii) ownership of fifty percent (50%) or more of the outstanding shares, or (iii) beneficial ownership of such entity.

"You" (or "Your") shall mean an individual or Legal Entity exercising permissions granted by this License.

"Source" form shall mean the preferred form for making modifications, including but not limited to software source code, documentation source, and configuration files.

"Object" form shall mean any form resulting from mechanical transformation or translation of a Source form, including but not limited to compiled object code, generated documentation, and conversions to other media types.

"Work" shall mean the work of authorship, whether in Source or Object form, made available under the License, as indicated by a copyright notice that is included in or attached to the work (an example is provided in the Appendix below).

"Derivative Works" shall mean any work, whether in Source or Object form, that is based on (or derived from) the Work and for which the editorial revisions, annotations, elaborations, or other modifications represent, as a whole, an original work of authorship. For the purposes of this License, Derivative Works shall not include works that remain separable from, or merely link (or bind by name) to the interfaces of, the Work and Derivative Works thereof.

"Contribution" shall mean any work of authorship, including the original version of the Work and any modifications or additions to that Work or Derivative Works thereof, that is intentionally submitted to Licensor for inclusion in the Work by the copyright owner or by an individual or Legal Entity authorized to submit on behalf of the copyright owner. For the purposes of this definition, "submitted" means any form of electronic, verbal, or written communication sent to the Licensor or its representatives, including but not limited to communication on electronic mailing lists, source code control systems, and issue tracking systems that are managed by, or on behalf of, the Licensor for the purpose of discussing and improving the Work, but excluding communication that is conspicuously marked or otherwise designated in writing by the copyright owner as "Not a Contribution."

"Contributor" shall mean Licensor and any individual or Legal Entity on behalf of whom a Contribution has been received by Licensor and subsequently incorporated within the Work.

2. Grant of Copyright License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable copyright license to reproduce, prepare Derivative Works of, publicly display, publicly perform, sublicense, and distribute the Work and such Derivative Works in Source or Object form.
3. Grant of Patent License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable (except as stated in this section) patent license to make, have made, use, offer to sell, sell, import, and otherwise transfer the Work, where such license applies only to those patent claims licensable by such Contributor that are necessarily infringed by their Contribution(s) alone or by combination of their Contribution(s) with the Work to which such Contribution(s) was submitted. If You institute patent litigation against any entity (including a cross-claim or counterclaim in a lawsuit) alleging that the Work or a Contribution incorporated within the Work constitutes direct or contributory patent infringement, then any patent licenses granted to You under this License for that Work shall terminate as of the date such litigation is filed.
4. Redistribution. You may reproduce and distribute copies of the Work or Derivative Works thereof in any medium, with or without modifications, and in Source or Object form, provided that You meet the following conditions:
 - (a) You must give any other recipients of the Work or Derivative Works a copy of this License; and
 - (b) You must cause any modified files to carry prominent notices stating that You changed the files; and
 - (c) You must retain, in the Source form of any Derivative Works that You distribute, all copyright, patent, trademark, and attribution notices from the Source form of the Work, excluding those notices that do not pertain to any part of the Derivative Works; and
 - (d) If the Work includes a "NOTICE" text file as part of its distribution, then any Derivative Works that You distribute must include a readable copy of the attribution notices contained within such NOTICE file, excluding those notices that do not pertain to any part of the Derivative Works, in at least one of the following places: within a NOTICE text file distributed as part of the Derivative Works; within the Source form or documentation, if provided along with the Derivative Works; or, within a display generated by the Derivative Works, if and wherever such third-party notices normally appear. The contents of the NOTICE file are for informational purposes only and do not modify the License. You may add Your own attribution notices within Derivative Works that You distribute, alongside or as an addendum to the NOTICE text from the Work, provided that such additional attribution notices cannot be construed as modifying the License.

You may add Your own copyright statement to Your modifications and may provide additional or different license terms and conditions for use, reproduction, or distribution of Your modifications, or for any such Derivative Works as a whole, provided Your use, reproduction, and distribution of the Work otherwise complies with the conditions stated in this License.

5. Submission of Contributions. Unless You explicitly state otherwise, any Contribution intentionally submitted for inclusion in the Work by You to the Licensor shall be under the terms and conditions of this License, without any additional terms or conditions. Notwithstanding the above, nothing herein shall supersede or modify the terms of any separate license agreement you may have executed with Licensor regarding such Contributions.
6. Trademarks. This License does not grant permission to use the trade names, trademarks, service marks, or product names of the Licensor, except as required for reasonable and customary use in describing the origin of the Work and reproducing the content of the NOTICE file.
7. Disclaimer of Warranty. Unless required by applicable law or agreed to in writing, Licensor provides the Work (and each Contributor provides its Contributions) on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied, including, without limitation, any warranties or conditions of TITLE, NON-INFRINGEMENT, MERCHANTABILITY, or FITNESS FOR A PARTICULAR PURPOSE. You are solely responsible for determining the appropriateness of using or redistributing the Work and assume any risks associated with Your exercise of permissions under this License.

8. Limitation of Liability. In no event and under no legal theory, whether in tort (including negligence), contract, or otherwise, unless required by applicable law (such as deliberate and grossly negligent acts) or agreed to in writing, shall any Contributor be liable to You for damages, including any direct, indirect, special, incidental, or consequential damages of any character arising as a result of this License or out of the use or inability to use the Work (including but not limited to damages for loss of goodwill, work stoppage, computer failure or malfunction, or any and all other commercial damages or losses), even if such Contributor has been advised of the possibility of such damages.
9. Accepting Warranty or Additional Liability. While redistributing the Work or Derivative Works thereof, You may choose to offer, and charge a fee for, acceptance of support, warranty, indemnity, or other liability obligations and/or rights consistent with this License. However, in accepting such obligations, You may act only on Your own behalf and on Your sole responsibility, not on behalf of any other Contributor, and only if You agree to indemnify, defend, and hold each Contributor harmless for any liability incurred by, or claims asserted against, such Contributor by reason of your accepting any such warranty or additional liability.

END OF TERMS AND CONDITIONS

APPENDIX: How to apply the Apache License to your work.

To apply the Apache License to your work, attach the following boilerplate notice, with the fields enclosed by brackets "[]" replaced with your own identifying information. (Don't include the brackets!) The text should be enclosed in the appropriate comment syntax for the file format. We also recommend that a file or class name and description of purpose be included on the same "printed page" as the copyright notice for easier identification within third-party archives.

Copyright 2016, Arthur Teplitzki 2013, Edmodo, Inc.

Licensed under the Apache License, Version 2.0 (the "License");
you may not use this file except in compliance with the License.
You may obtain a copy of the License at

<http://www.apache.org/licenses/LICENSE-2.0>

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied.

See the License for the specific language governing permissions and limitations under the License.

usb-serial-for-android

MIT License

Copyright (c) 2011-2013 Google Inc.
Copyright (c) 2013 Mike Wakerly

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.